Instock Staffs



External staffs are used on external corners of walls set flush into walls eg. Archway openings and chimney breasts. A cut can be made towards bottom to fit to desired height by removing a section then rejoining. Please ask for more information. Please note that plasterboard should be stopped 70mm short each side when installing External Staffs

Pictured SR AES2 External Staff, AC24 Corbel & AAP3

9

ALLPLASTA